


# TECHNICAL CHARACTERISTICS INSTRUCTIONS FOR USE, ASSEMBLY INSTRUCTIONS, MAINTENANCE INSTRUCTIONS

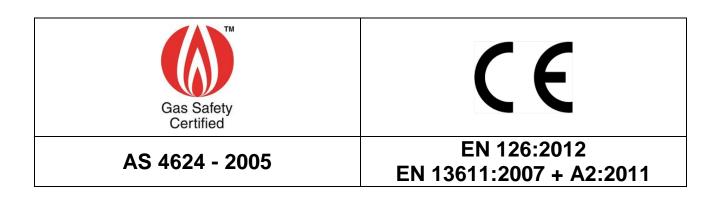

MODEL 32

# MANUALLY OPERATED VALVE WITH ADJUSTABLE MECHANICAL THERMOSTAT





## **GENERAL INSTRUCTIONS**

Feature	Description
Туре	adjustable mechanical thermostat
Applications	ovens
types of gas used	1 <sup>st</sup> – 2 <sup>nd</sup> – 3 <sup>rd</sup> family
group	1
thermoelectric flame supervisor class	B (10,000 cicles)
number of outlets	1
nominal diameter	8
maximum working pressure	6.5 kPa
minimum working temperature (body)	0°C
maximum working temperature (body)	80/130°C
nominal flow rate	0.460 m <sup>3</sup> /h (test gas: air - pressure drop 125 Pa - AS 4624-2005) 0.411 m <sup>3</sup> /h (test gas: air - pressure drop 100 Pa - EN 126-2012)
reduced flow rate	0.046 m <sup>3</sup> /h (test gas: air - pressure drop 125 Pa - AS 4624-2005) 0.041 m <sup>3</sup> /h (test gas: air - pressure drop 100 Pa - EN 126-2012)
opening angle of max. flow rate	231°
opening angle of min. flow rate	52°
external leak tightness	leakage ≤ 60 cc/h (1 ml/min) (air - pressure 15 kPa)
internal leak tightness	leakage $\leq$ 20 cc/h (0.3 ml/min) (air - pressure 15 kPa)
gas valve continued operation	10,000 cycles (EN 126:2012 - EN 13611:2007 + A2:2011) 10,000 cycles (AS 4624 – 2005)
inlet gas connection	threaded (see attached sheets)
outlet gas connection	see attached sheets
storage temperature range	-15°C to + 50°C
sensor's maximum temperature (bulb)	315 °C
temperature adjustment range	100 – 315°C
temperature tolerance	<u>+</u> 8.5°C
assembly position	Any position
Range of modulation	30°C
operating torque	≤ 30 N
mechanical differential	8°A
Temperature variation (130°C)	17°C
Temperature tolerance	± 10°C
Drift for thermal overload	±5°C

Model 32	Revision 03 – gen 16	page 2 of 5



## **INSTRUCTIONS FOR USE**

To turn the thermostat on, simultaneously press and turn the control shaft.

Holding down the control shaft and turning it anti-clockwise allows the gas to pass to the burner.

Once the thermostat has been turned through 52°, gas begins to flow giving the minimum adjustable temperature. The thermostat can be turned through 231°A giving a continuous increase in temperature.

Temperatures may be adjusted from 128°C to 300°C.

The thermostat has an adjustable perforated metering screw (by-pass) which fixes the reduced flow-rate at a preset value when fully tightened. If a different type of gas is used, the amount of reduced flow can be adjusted by turning the by-pass with a screwdriver.

# ASSEMBLY INSTRUCTIONS

The thermostats are designed to be used inside the cooking appliances, protected from any possible infiltrations of liquid or dirt and from the atmospheric agents. The non-observance of this prescription can compromise the correct working and the safety of the product.

The thermostats are suitable for assembly onto manifolds of various diameters either by means of a nut and olive fixing system or by means of a direct screwing onto the tubing. When screwing the thermostat onto the manifold, tightness will be obtained by use of a proper sealant.

The outlet is designed for a connection pipe to the burner.

Calibration is determined in the factory and should not be altered even by qualified personnel. In case of irregularity, the whole thermostat should be replaced.

To avoid damage that may compromise correct functioning of the thermostats, do not exceed the tightening torques listed in the attached tables.

To avoid dirt or other material entering the equipment which may affect functioning and safety of the thermostat, a suitable filter should be mounted on the manifold supply inlet.

## MAINTENANCE INSTRUCTIONS

Maintenance of the taps is not foreseen, in case of failure or incorrect operation replace the tap with a new one (same model and same characteristics).

NB.: Leak test should be performed using a suitable appliance. Leak test mustn't be done by means of a flame or immersion of the valve in water or other liquids. The non-observance of this prescription can compromise the correct working and the safety of the product.



## VARIANTS

## **INLET VARIANTS**

inlet	denomination	assembly
50	tube diameter 6 mm	compression fitting
51	tube diameter 7 mm	compression fitting
52	tube diameter 8 mm	compression fitting
53	tube diameter 10 mm	compression fitting

## **OUTLET VARIANTS**

outlet	denomination	assembly
A	tube diameter 6 mm	compression fitting
В	tube diameter 8 mm	compression fitting
С	tube diameter 10 mm	compression fitting
D	tube diameter 6 mm	compression fitting
Е	tube diameter 8 mm	compression fitting
F	G 3/8"	flared tube
G	G 1/4"	flared tube
Н	M 14 x 1.5	flared tube
L	tube diameter 9.525 mm	compression fitting
М	tube diameter 7 mm	compression fitting
0	tube diameter 6.35 mm	compression fitting
S	tube diameter 6.35 mm	compression fitting
Т	tube diameter 10 mm	compression fitting
Z	tube diameter 4 mm	compression fitting

#### Maximum torque values:

Maximum torque value		
Component	Nm	lbf.in
Nut + olive + aluminium tube for oven outlet of thermostats	15	133
Nut + olive + copper tube for oven outlet of thermostats	15	133
Nut + olive + steel tube for oven outlet of thermostats	10	89
Nut + tapered aluminium tube (bundy) for oven outlet of thermostats	15	133
Nut + boulged aluminium tube for oven outlet of thermostats	15	133
Nut for fixing thermocouple to magnet	4	35
Screws for brackets	1.5	13

Model 32 Revision 03 – gen 16 page 4 of	5
---	---



## MANUFACTURING DATE CODES

MONTH	CODE
JANUARY	N
FEBRUARY	0
MARCH	Р
APRIL	R
MAY	S
JUNE	Т
JULY	U
AUGUST	V
SEPTEMBER	W
OCTOBER	Х
NOVEMBER	Y
DECEMBER	Z

YEAR	CODE
1992	A
1993	В
1994	C
1995	D E
1996	E
1997	F
1998	Н
1999	I
2000	J
2001 2002 2003	K
2002	L
2003	Μ
2004 2005	4
2005	5
2006	6
2007 2008	7
2008	8
2009 2010 2011	9
2010	0
2011	1
2012	2
2013 2014	3
2014	4
2015	5
2016	6

#### EXAMPLE: A COMPONENT PRODUCED IN APRIL 2004 IS MARKED

#### R4

Alternatively, on the component can be marked a four digit code indicating the week (first two digits) and the year of production (last two digits).

EXAMPLE: A COMPONENT PRODUCED THE 14<sup>TH</sup> WEEK OF 2004 IS MARKED

#### 1404

Alternatively, on the component can be marked the day (first digits), the month (according with the code in table above) and the year of production (last two digits).

EXAMPLE: A COMPONENT PRODUCED IN APRIL, 19 2004 IS MARKED

### 19 R 04

Model 32Revision 03 – gen 16page 5 of 5
---